POWDER HOUSE

CLOSE-COUPLED WC

INSTALLATION GUIDE



Read the complete guide before installation.

Installation must be carried out by a qualified professional.

CLOSE-COUPLED WC

POWDER HOUSE

PREPARATION


IMPORTANT - PLEASE READ

- Read these instructions carefully before starting installation.
- Check the product for missing parts or damage before installation.
- Installation should be carried out by a qualified plumber.
- In newly completed buildings, fill the traps with water to prevent gases from damaging taps, seat hinges or other fittings.
- Install and test the inlet and outlet connections before mounting the WC.
- Clean periodically to prevent limescale deposits.
- Do not use abrasive or aggressive cleaning agents on ceramic, seats, hinges or plastic components.


PRODUCT DIMENSIONS

All dimensions are shown in millimetres.


TOP VIEW

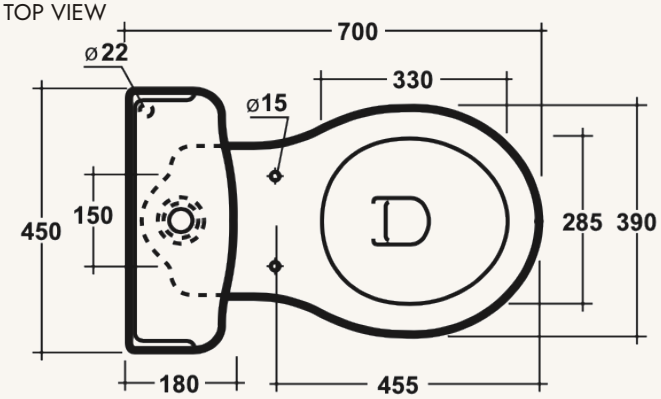

COMPONENTS

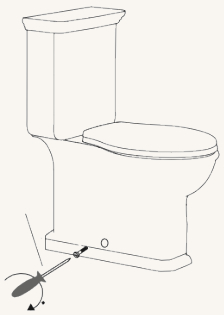

SIDE VIEW

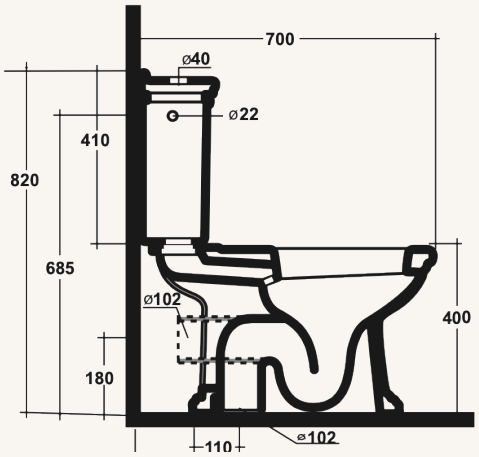


Included fixing kit for securing the WC to the floor.

* Recommended installation height


INSTALLATION

1

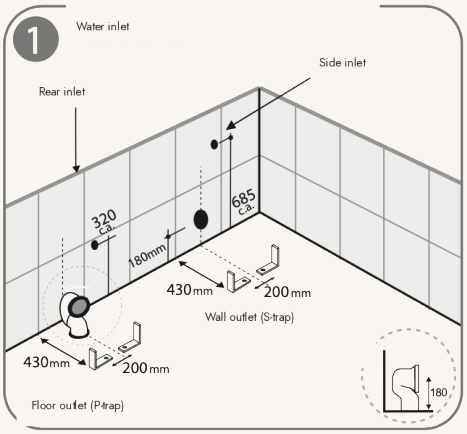


Prepare the water inlet, waste outlet and fixing points according to the dimensions shown. The WC supports both wall outlet (P-trap) and floor outlet (S-trap) installation.

2

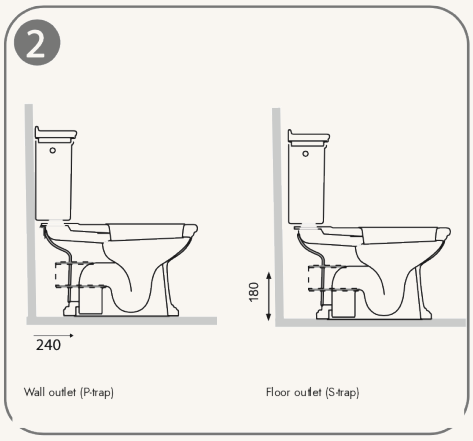

Prepare the cistern and waste connections according to the selected outlet configuration. Position the WC and check that all connections align correctly. Lubricate both sides of the connections before assembly.

3

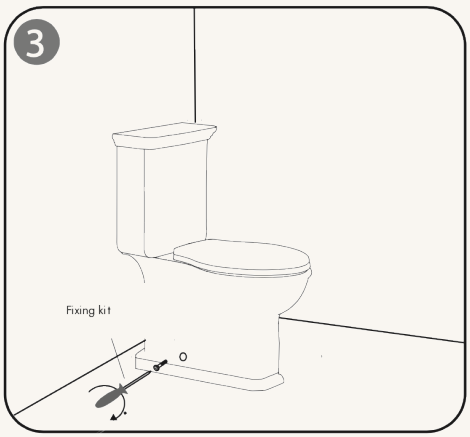

Level the WC and secure it using the fixing screws. Tighten the fixings alternately to ensure an even and stable installation.