POWDER HOUSE

HIGH-CISTERN WC

INSTALLATION GUIDE



Read the complete guide before installation.

Installation must be carried out by a qualified professional.

PREPARATION


IMPORTANT - PLEASE READ

- Read these instructions carefully before starting installation.
- Check the product for missing parts or damage before installation.
- Installation should be carried out by a qualified plumber.
- In newly completed buildings, fill the traps with water to prevent gases from damaging taps, seat hinges or other fittings.
- Install and test the inlet and outlet connections before mounting the WC.
- Clean periodically to prevent limescale deposits.
- Do not use abrasive or aggressive cleaning agents on ceramic, seats, hinges or plastic components.


PRODUCT DIMENSIONS

All dimensions are shown in millimetres.


TOP VIEW

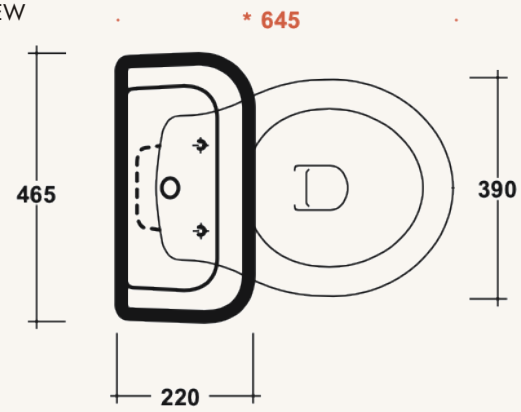

FRONT VIEW

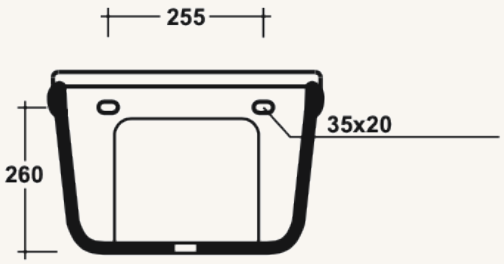


SIDE VIEW

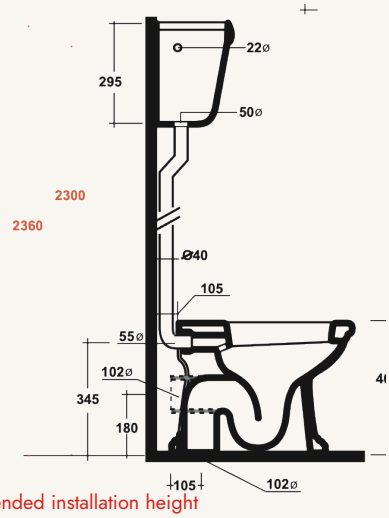

* Recommended installation height


COMPONENTS

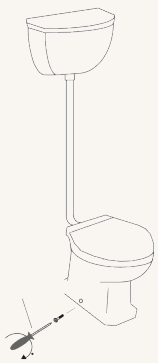

Included fixing system for a pre-installed support frame with M12 threaded rods.


INSTALLATION

1

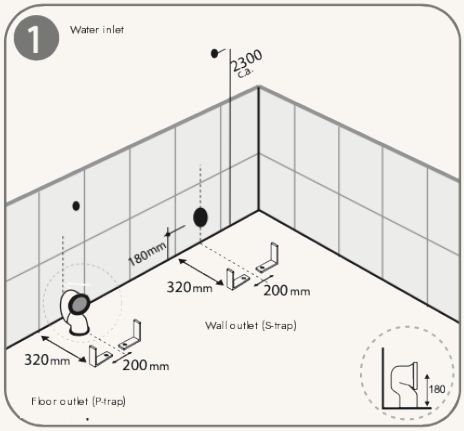


Prepare the water inlet, waste outlet and fixing points according to the dimensions shown. The WC supports both wall outlet (P-trap) and floor outlet (S-trap) installation.

2

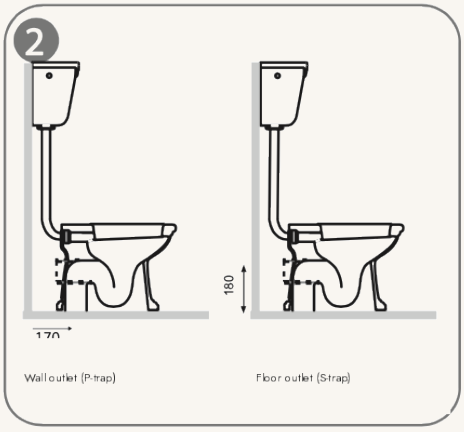

Prepare the cistern and waste connections according to the selected outlet configuration. Position the WC and check that all connections align correctly. Lubricate both sides of the connections before assembly.

3

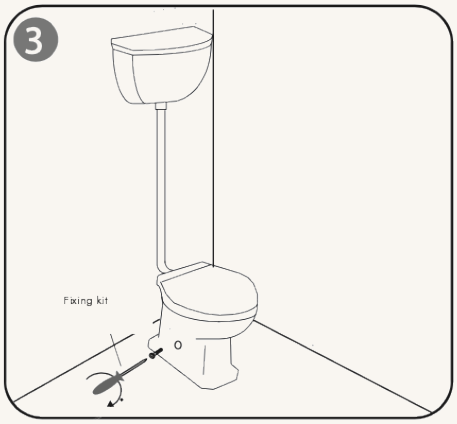

Level the WC and secure it using the fixing screws. Tighten the fixings alternately to ensure an even and stable installation.