POWDER HOUSE

WALL-HUNG WC

INSTALLATION GUIDE



Read the complete guide before installation.

Installation must be carried out by a qualified professional.

WALL-HUNG WC

POWDER HOUSE

PREPARATION


IMPORTANT - PLEASE READ

- Read these instructions carefully before starting installation.
- Check the product for missing parts or damage before installation.
- Installation should be carried out by a qualified plumber.
- In newly completed buildings, fill the traps with water to prevent gases from damaging taps, seat hinges or other fittings.
- Install and test the inlet and outlet connections before mounting the WC.
- Clean periodically to prevent limescale deposits.
- Do not use abrasive or aggressive cleaning agents on ceramic, seats, hinges or plastic components.


PRODUCT DIMENSIONS

All dimensions are shown in millimetres.


TOP VIEW

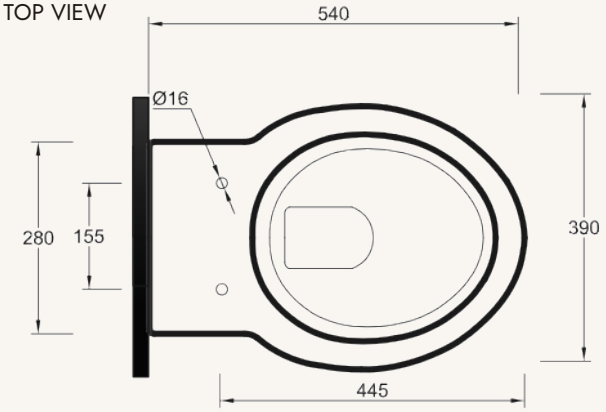

FRONT VIEW

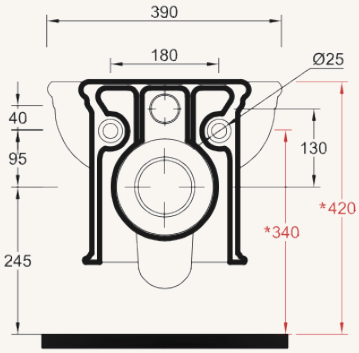


SIDE VIEW

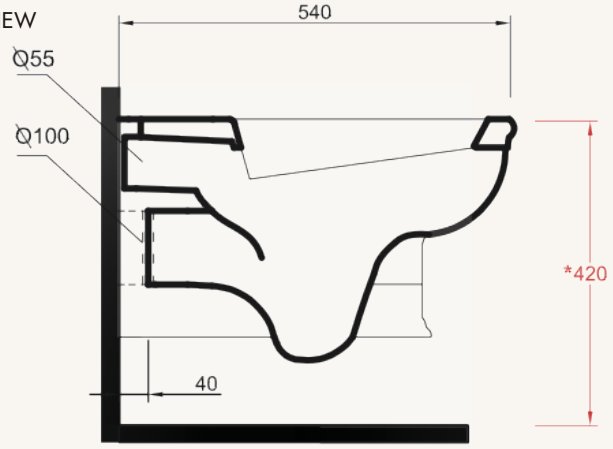

* Recommended installation height


COMPONENTS

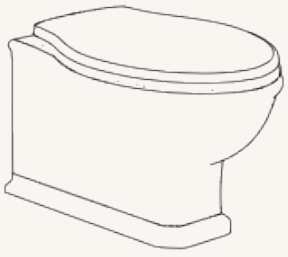

Included fixing system for a pre-installed support frame with M12 threaded rods.


INSTALLATION

1

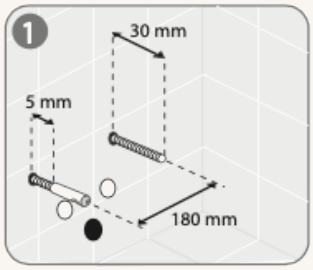


Prepare the waste outlet and fixing rods according to the dimensions shown. Cut the rods if required.

2

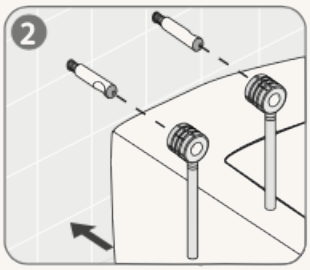

Screw the two steel sleeves onto the threaded rods. Insert the fixing system into the ceramic body.

3

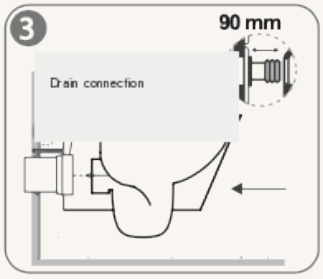

Prepare the cistern flush connection according to the illustrated dimensions. Lubricate both sides of the connections before assembly.

4



Carefully slide the WC onto the fixing rods and connect the flush pipe and waste outlet.

5



Adjust the WC and secure it with the fixing nuts. Tighten the nuts alternately to ensure an even fit against the wall. Maximum tightening torque: 7 Nm.